




# Infra-red Ball Trigger

Document version 20230110

## For AMF 82-70 & 82-30

(Also suitable for Brunswick A machines without electronic time delay)

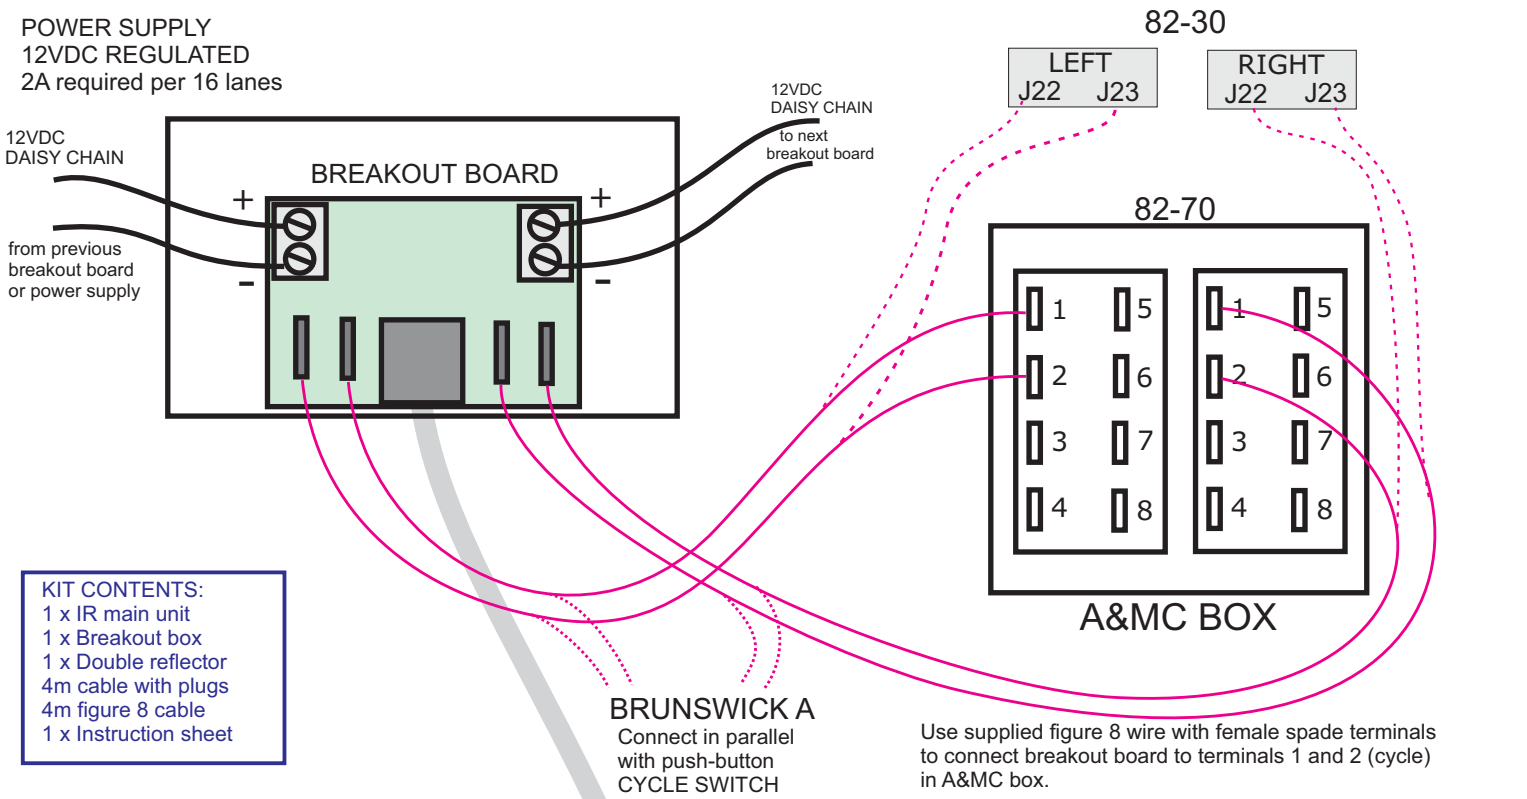

If beam is broken for more than 1.5 seconds, the machine will not cycle, and cycle is locked out for a further 20 seconds.

This is a safety feature to guard against machine cycling while a person or lane machine has interrupted the beam.

The YELLOW LED will flash while beam is interrupted and during the 20 second lockout period.

The unit will reset to READY condition.

**Features:**

Single GREEN LED indicates POWER ON.

Left and Right GREEN LEDs = READY - everything OK.

Left and Right YELLOW LEDs flicker when beam is broken and FLASH to indicate an ERROR.

Left and Right RED LEDs flick ON as CYCLE RELAY activates.

